Alto / Tenor Sax Stand with Flute Peg



SXS7101B / 12573





For use with either an alto or tenor sax, this compact stand also includes one screw-in wooden peg for a flute or clarinet. The angle of the center shaft provides proper balance of the instrument while the upper and lower yoke securely holds the saxophone in place. The soft black velveteen rubber will not damage the finish of your saxophone.

Product Specifications

Application: Alto / tenor saxophone, flute, clarinet

Base Spread: 18"

Number of Instruments Held: 2

Color: Black

