

RCA Female to XLR Female



- XLR PIN-2 goes to the center contact of the RCA, this carries the signal.
- XLR PINs-1 and 3 are tied together and carry the Ground via the Chassis. This connects to the Surround of the RCA