



ASSEMBLY INSTRUCTIONS

Take the yoke shaft and insert it upside down into the wood display mount. Rotate yoke shaft 180 degrees until it locks firmly into the wood display mount.

INSTALLATION INSTRUCTIONS

The recommend weight limit for the hangers is 15 lbs.

Choose the location for the hang-up on the wall. Mark the locations with a pencil. If the location is on a wall stud, screw directly into the wall using 2 ½" drywall screws. If the location is not on a wall stud, use the appropriate anchors to suit your needs. DO NOT USE drywall anchors that are rated for less than 15 lbs.*

If the yoke doesn't fit your guitar, adjust the distance between the yoke ends by pulling them apart. You should adjust the yoke so that the neck of the guitar fits snugly into the yoke. The yoke is designed to swivel so that your guitar will hang straight on the wall.

* *NOTE: Mounting hardware not included.*

IMPORTANT NOTE:

Before using this product, ensure that the guitar finish is fully cured.

On-Stage Stands is not responsible for the method with which the purchaser attaches this hanger to the wall or the strength of the wall material. DO NOT swing the guitar while it is resting in the hanger!

Go to www.onstagestands.com to see more great products for your guitar, or ask your dealer.

