


GTP7000 MINI PEDAL TUNER

 


Operation and Function

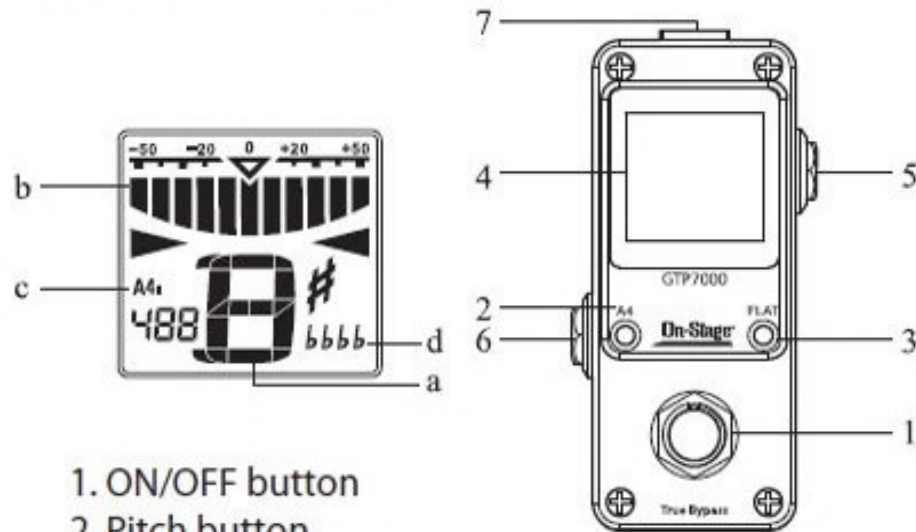

1. ON/OFF button
2. Pitch button
3. Flat button: A. Note name B. Tuning meter and calibration C. Pitch D. Flats
4. Screen
5. Input
6. Output
7. 9V DC power in

Specifications

Tuning Mode: Chromatic
Pitch Range: 430-450Hz
Flat: *b, bb, bbb, bbbb.*
Tuning Tolerance: ± 0.5 cent
Power: 9V DC 
Dimension: 3.6" x 1.5" x 1.2"
Weight: .25 lb

How to Use

1. Connect a 9V DC power into the pedal. Please pay attention to the power polarity.
2. Plug guitar into the input, and turn the tuner on by pressing the ON/OFF button.
3. Press the A4 button to change the pitch.
4. Press the flat button to change tuning to flat note. Four flat modes: *b, bb, bbb, bbbb.*
5. Play a single note from your guitar, the note name will appear in the tuner screen. The screen color will change, and the tuning needle will move.
 - When the center blue tuning meter and 2 blue triangles appear, the note is in tune.
 - When the left tuning meters appear and the left blue triangle appears, the note is flat.
 - When the right yellow tuning meters appear and the right blue triangle appears, the note is sharp.
6. The tuner features a bypass function. When you are finished tuning, press the ON/OFF button.

WORKS WITH OUR
PS801
PEDAL POWER
PACK

